User Instruction Manual

BURCO

COMMERCIAL

4 & 6 Slot Toasters

Please read and keep these instructions

These instructions cover the Burco 4 & 6 slot toasters TSSL14 & TSSL16

Chrome end caps -	SKU's: 4 slot 444441581, 6 slot 444441582
Red end caps -	SKU's: 4 slot 444440606, 6 slot 444440608
Cream end caps -	SKU's: 4 slot 444440607, 6 slot 444440609
Black end caps -	SKU's: 4 slot 444440980, 6 slot 444440981

TSSL14, TSSL16

SKU's 444440606, 444440607, 444440608, 444440609 444440980, 444440981, 444441581, 444441582

Glen Dimplex Professional Appliances
Stoney Lane, Prescot, Merseyside, L35 2XW
Tel: **0844 815 3755**

www.burco.co.uk

INTRODUCTION.

To ensure you obtain full benefits from your new toaster:

- Please read this instruction booklet carefully, and follow all instructions.
- If you are unsure of any aspect of the installation, use or performance of your appliance, please contact the after sales number shown on the back page**.**

SPECIFICATIONS

Model		TSSL14	TSSL16
SKU Number		444440606, 444440607 444440980, 444441581	444440608, 444440609 444440981, 444441582
Dimensions	Height	220mm	220mm
	Width	370mm	460mm
	Depth	225mm	225mm
Weight		6kg	8kg
Voltage		230V ~50Hz	230V ~50Hz
Power rating		2240W	2760W

INSTALLATION

Installation Requirements

It is essential that this appliance is installed correctly. Installation should comply with all local electrical, and health and safety requirements.

WEEE directive registration no. WEE/DK0059TT
At end of unit life, dispose of appliance and any replacement parts in a safe manner, via a licenced waste handler. Units are designed to be dismantled easily and recycling of all material is encouraged whenever practicable.

Before Connection to Power Supply:

Remove all packaging.
Check the toaster for damage. Report any damage immediately to the carrier or supplier.
Remove any protective plastic coating from the outer panels.
Check the available power supply corresponds to that shown on the toaster rating label.

Location:

This toaster is for indoor use only.
The toaster is only to be installed in locations where its use and maintenance is restricted to trained personnel.
The mains lead should reach from the mains socket without straining the connections.
Do not let the mains lead hang over the edge of the table or counter, and keep it away from any hot surfaces.
Do not let the mains lead run across an open space.
Do not place the toaster where the mains lead could fall into a sink.
Do not place the toaster near a hot gas or electric burner**.**
Ensure the toaster is installed on a level, firm surface. Do not place on surfaces or near any wall, partition or kitchen furniture unless they are made from non-combustible material, or clad with non-combustible heat insulating material.

Important:

DO NOT RESTRICT THE AIR FLOW AROUND THE FRONT AND REAR OF THE UNIT.

Electrical Connection:
Fitting a plug
The mains lead of this appliance will already be fitted with a BS1363 13A plug. If the fuse has to be replaced, use a 13 amp fuse complying with BS 1362.
If the plug is not suitable for your socket then the plug must be cut off and disposed of safely. An appropriate plug should be fitted as follows:
IMPORTANT: The wires in the mains lead are coloured in accordance with the following code:
Green and Yellow - Earth
Blue - Neutral
Brown - Live
The wire which is coloured green and yellow must be connected to the terminal in the plug which is marked with the letter E or the earth symbol or coloured green or green and yellow.
The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black or blue.
The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red or brown.
Make sure that the connections are tight and that there are no loose strands of wire and no insulation trapped under the terminals. Tighten the clamp in the plug making sure that it grips the outer covering of the cord. If fitting a BS 1363 13A fused plug then fit a 13A fuse. Tighten the plug cover securely. If you are in any doubt, consult a qualified electrician.

IMPORTANT: if the supply cord is damaged, it must be replaced by the manufacturer, service agent or similar qualified person in order to avoid a hazard. The supply cord may become warm when the appliance is in use.

WARNING - THIS APPLIANCE MUST BE EARTHED

Electrical connection: 230V ~50Hz, TSSL14 = 10A, 2240W; TSSL16 = 12A, 2760W

Before Use:
When the toaster is operated for the first time, smoke may be emitted - this is due to oil used during manufacture, but is not harmful.

USER GUIDE

DURING USE THE APPLIANCE BECOMES VERY HOT. BE CAREFUL NOT TO TOUCH HOT SURFACES.

TURN OFF THE POWER SUPPLY AND REMOVE THE PLUG WHEN NOT IN USE, BEFORE CLEANING, AND BEFORE REPLACING ANY PARTS.

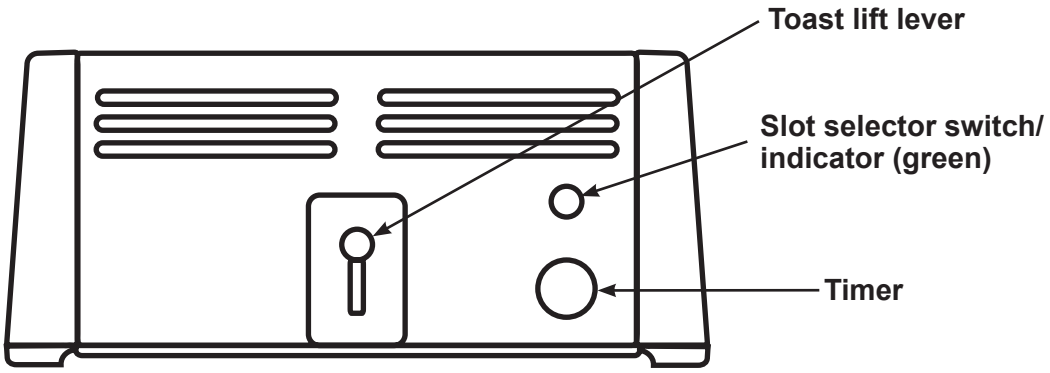

Controls:

- Only place plain bread, crumpets etc in the toaster. Any loose pieces such as currants or toppings may touch the elements causing damage.
- Place the required number of slices of bread into the slots, and select the appropriate number of slots to be operated with the selector switch on the front right of the toaster:
  - the 4 slot model can be operated with either 2 slots (= I) or 4 slots (= II)
  - the 6 slot model can be operated with either 3 slots (= I) or 6 slots (= II)
- Lower the bread into the toaster by lifting the lever on the front of the toaster.
- Set the timer to the required toasting time by turning the timer knob, maximum 5 minutes. The selector switch will be illuminated whenever the elements are on.
- The timer will produce an audible alarm and switch off the power at the end of the timed period.
- Lift the toast by pressing the lever on the front of the toaster. The bread can be raised and lowered at any time without interrupting the timer. Different types of bread will require different times.
- The crumb tray in the base of the toaster must be emptied regularly.

Cleaning:
ALWAYS TURN OFF THE POWER SUPPLY AND REMOVE THE PLUG BEFORE CLEANING
THIS APPLIANCE IS NOT WATERPROOF
DO NOT USE A WATER JET SPRAY TO CLEAN THE INTERIOR OR EXTERIOR OF THE APPLIANCE, OR USE A WATER JET IN THE VICINITY OF THE APPLIANCE

Clean with a good quality stainless steel cleaning compound. Do not use harsh abrasive cleaners as this could damage the surface finish.

Trouble-shooting:

Fault	Possible Cause	Remedy
The appliance does not operate.	No power to the appliance.	Check supply socket is switched on. Check fuse and circuit breaker. Check green indicator is illuminated when timer is on.
One slot only toasts on one side.	Extra slice of bread inserted eg 4 slices when 3 slots are selected.	Do not use the extra slot, or set the selector switch to operate all slots.

GUARANTEE

This toaster is guaranteed against defective materials or faulty workmanship, for a period of 12 months on labour and 36 months on parts.

Note: Element failures are excluded from the guarantee.

This guarantee is given subject to the appliance being used in accordance with the instructions supplied, and on the supply voltage marked on the rating label. The guarantee is subject to fair wear and tear conditions.
The guarantee does not cover consequential damage arising out of any failure acceptable under guarantee, nor does it cover damage resulting from misuse, accident or unauthorised alterations to the oven.
Proof of purchase will be required.
In any communication with the supplier or manufacturer, quote the model and serial number marked on the oven rating label.
This guarantee does not affect your statutory rights.

The products are intended for commercial use as detailed in these instructions.
The Company has a policy of continuous improvement in product quality and design. The Company therefore reserves the right to change the specification at any time.

FAQ’s

SPARES LIST

ALWAYS TURN OFF THE POWER SUPPLY AND REMOVE THE PLUG BEFORE REPLACING ANY PARTS

Part Number	Description	Qty
082641153	TIMER 301120016	1
082641162	SWITCH 301080082	1
082641154	KNOB 301110145	1
082641155	ELEMENT inner 500W 301040658	3 or 5
082641156	ELEMENT outer 370W 301040657	2
082641161	BALL lever 302090060	1
082641159	SPRING 302080094	1
082641163	FOOT 302090083	1
082641164	FOOT rubber 302020166	1
	Handbook	1

WIRING DIAGRAM
4 & 6 SLOT TOASTER

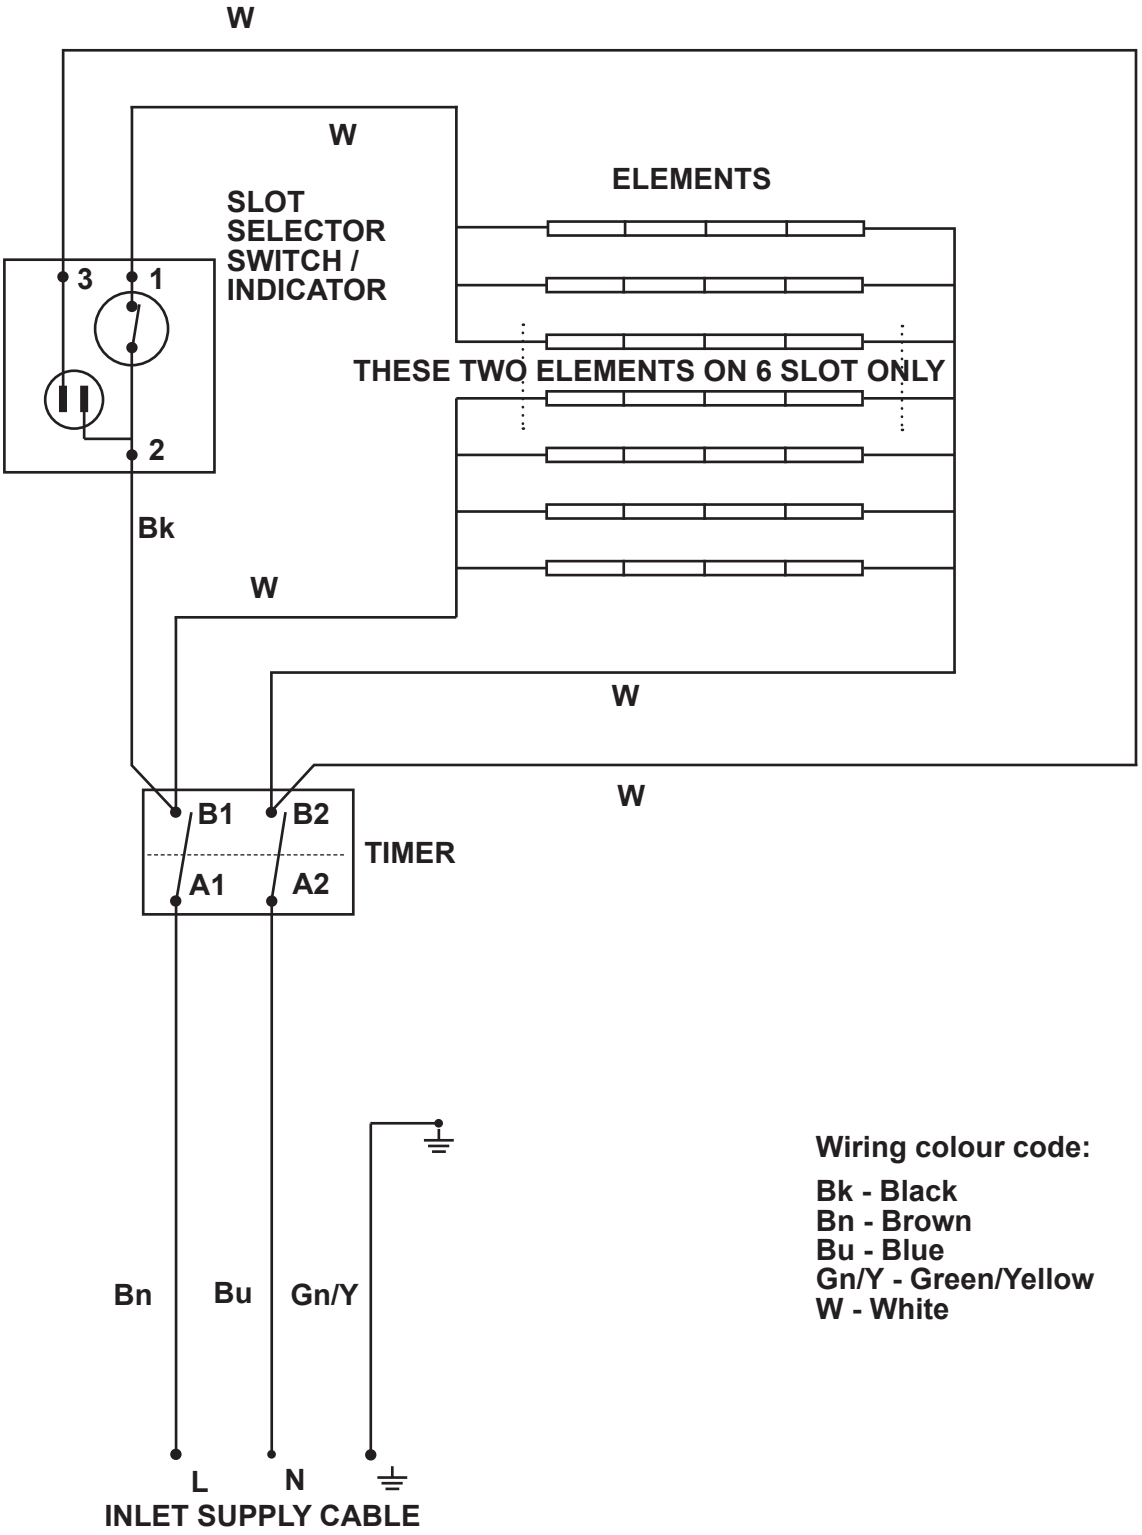

Wiring colour code:

Bk - Black
Bn - Brown
Bu - Blue
Gn/Y - Green/Yellow
W - White

Customer helpline

For spares and after-sales service please contact Burco on:

T: 0844 815 3755

F: 0844 815 3748

E: info@gdha.com

Glen Dimplex Professional Appliances
(A Division of Glen Dimplex Home Appliances)
Stoney Lane,
Prescot,
Merseyside L35 2XW

www.burco.co.uk

GLEN DIMPLEX
PROFESSIONAL APPLIANCES

08.2011